


FREE TO AIR DIGITAL SATELLITE RECEIVER

User's Manual


Model No.: **SV-4000**

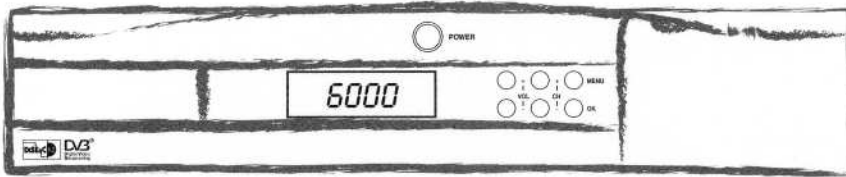

SONICVIEW

Caution Guide

Please read this safety information carefully and keep these instructions and heed all warnings. Always follow these instructions to avoid the risk of injury to yourself or damage to your equipment.

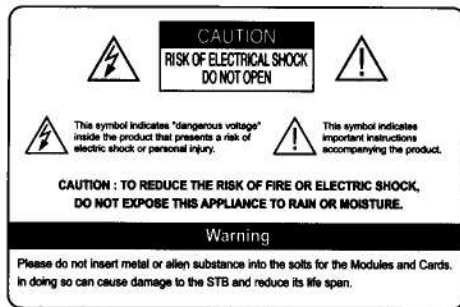

- **Placement:** Do not place the receiver on an unstable cart, stand, tripod, bracket or table. The receiver may fall to cause the serious personal injury and damage to the receiver. When a cart is used, use caution when moving the cart/Receiver combination to avoid injury from tip-over. Do not use or store the receiver where it is exposed to direct sunlight, or near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat. Never stack other electronic equipment on top of the receiver. Place the receiver at least 30mm from the wall.
- **Operating Power:** Operate the receiver using only the type of power source indicated on the marking label. Protect the power cord from being walked on or pinched. Particularly at plugs, convenience receptacles, and the point where they exit from the receiver.
Unplug the receiver during lightning storms or when unused for long periods of time.
- **Ventilation:** Do not block the receiver ventilation holes.
Ensure that free airflow is maintained around the receiver.
- **Cleaning:** Unplug the receiver from the AC power outlet before cleaning. Use only a dry cloth for cleaning the exterior of the receiver.
- **Attachment:** Do not use accessories or attachments not recommended by the receiver manufacturer as they may cause problems to the equipment and will void the warranty.

- **Water Proof:** Do not expose the receiver to the water or any liquids.
- **Grounding:** The ground of the LNB cable must be directly connected to the system ground for the satellite dish. The grounding system must comply with local regulations. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Service

Do not attempt to service the receiver by yourself as opening or removing cover may expose you to the dangerous voltage and will void warranty.

Refer all servicing to qualified service personnel. Servicing is required when the receiver has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects has fallen into the receiver, the receiver has been exposed to rain or moisture, does not operate normally, or has been dropped. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Please contact the authorized service center and personnel.

Caution & Note for FCC Regulation


Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limit for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

Contents

Front Panel	2
Rear Panel	3
Universal Remote Control Unit	4
How to connect your equipment	6
Menu Tree	7
Set Up Procedure	8
Channel Information Bar	12
Channel List	15
Electronic Program Guide (EPG)	16
Audio	17
Zoom	18
Multi-Picture	19
Find	20
Signal	22
Sleep	22
Miscellaneous Functions	23
Main Menu	24
Trouble Shooting	30
Technical Specification	31
Universal Remote Control Unit Setting & Key Code List	33

Front Panel

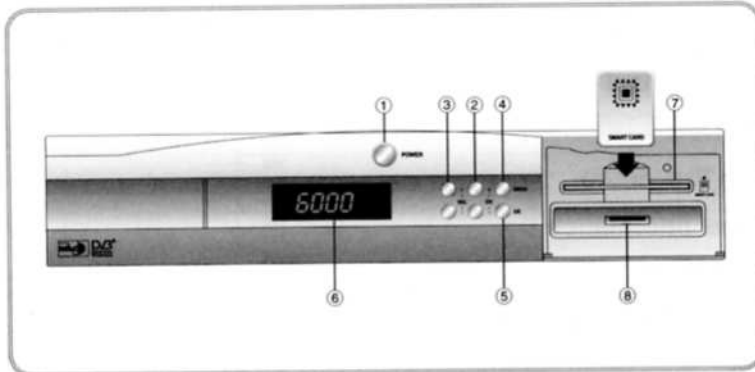

- | | |
|---|-----------------------------------|
| 1) Power Key | Switch the receiver ON / OFF. |
| 2) CH Up/Down | Channel Up/Down or direction key |
| 3) VOL Up/Down | Volume Up/Down or direction key |
| 4) MENU | Call the main menu |
| 5) OK | Select the menu or its parameters |
| 6) Display | 4-Digit ,7-Segment Display |
| 7) Smart Card Slot
(Option on model) | Slot for the Smart Card |
| 8) USB 2.0 Host Slot | Host Slot for USB 2.0 Devices |

